
Built-in Double Fan Oven

LAM4400



User & Installation Guide

LAMONA
Exclusive to Howdens Joinery Co.


Dear Customer,
Congratulations on your choice of oven which has been designed to give you excellent service.

The user manual will help you use your product quickly and safely.


- Please read this user manual before installing and using the oven.
- Always follow the safety instructions.
- Keep this user manual within easy reach for future reference.
- Please read any other documents supplied with the product.


Explanation of symbols

Throughout this user manual the following symbols are used:

 Important information or useful tips about usage.

 Warning for possible hazards to health and property.

 Warning possibility of electric shock.

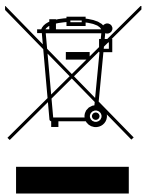

This product's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose. Your product also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home. We thank you doing your part to protect the environment.


Index

01 - Before using the oven	04	09 - How to operate the timer	12
		How to operate the oven timer	12
02 - Safety	04	Switch on fully automatic operation	12
General	04	Switch on semi-automatic operation	12
Safety for children	05	Interrupting the cooking process	13
Safety when working with electricity	05	How to use the minute minder	13
		Cancleing the minute minder	13
03 - General information	06	10 - Cooking and baking advice	14
Oven layout	06		
Control panel layout	06	11 - Cooking tables	15
Accessories	06		
04 - Preparation	07	12 - Care and maintenance	17
Initial use	07	General information	17
First cleaning of the appliance	07	Cleaning the control panel	17
Initial heating	07	Cleaning the door	17
Tips for energy saving	07	Removal of the oven door	17
		Replacing the oven Lamp	18
05 Operation modes	08	13 - Installation	19
Operating modes	08	Before installation	19
06 How to operate the main oven	09	Installation and connection	20
How to use the main oven	09	Connection to mains supply	21
Select a temperature and operating mode	09	Cooling Fan	21
Shelf positions	09		
Switch off the oven	09	14 - Technical specification	22
07 How to operate the top oven	10	15 - Troubleshooting	23
How to use the top oven	10		
Select a temperature and operating mode	10	16 - Your Guarantee	24
Shelf positions	10		
Switch off the oven	10		
08 - How to operate the Grill	11		
How to use the grill	11		
Switch on the grill	11		
Shelf positions	11		
Switch off the grill	11		

01 - Before using the Oven

- Make sure that you have removed all packaging, wrappings, stickers and films from the oven's surface.
- It is recommended that you clean and wash the oven's surface before using for the first time.

02 - Safety

 This appliance is for domestic cooking purposes only. It must not be used for other purposes, for example room heating. It is not designed for any other uses such as room heating or drying towels and dish cloths. Commercial use will void the guarantee.

The manufacturer shall not be liable for any damage caused by improper use or handling errors

General

This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are supervised by a person who will be responsible for their safety or who will instruct them accordingly in the use of the product. Children must be supervised to prevent them from tampering with the product.

- Connect the product to an earthed outlet protected by a fuse of suitable capacity as stated in the "Technical specifications" table. Our company shall not be liable for any problems arising due to the product not being earthed in accordance with the local regulations.
- Do not operate the product if the power cable is damaged. Call qualified service agent.
- Do not operate the product if it is defective or has any visible damage.
- Do not carry out any repairs or modifications on the product. However, you may remedy issues that do not require any repairs or modifications. See Troubleshooting, page 23.
-
- Never wash down the product with excessive water, as there is the risk of electric shock!
- Never use the product when your judgment or coordination is impaired by the use of alcohol and/or drugs.
- Product must be disconnected from the mains during installation, maintenance, cleaning and repair procedures.
- Repair procedures must always be performed by qualified service agents. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorised persons, which may also void the guarantee.
- Be careful when using alcoholic drinks in your dishes. Alcohol evaporates at high temperatures and may cause fire since it can ignite when it comes into contact with hot surfaces.
- Do not heat closed tins and glass jars in the oven. The pressure that would build-up in the tin/jar may cause it to burst.
- Do not place any flammable materials close to the product as the sides may become hot during use.
- Do not place baking trays, dishes or aluminium foil directly onto the bottom of the oven. The heat accumulation might damage the oven and it's enamel surfaces.
- Do not place aluminium foil on the base of the baking tray.
- Keep all ventilation slots clear of obstructions, as this may cause premature failure of the oven element.

Product may become hot when it is in use. Please be careful not to touch these hot surfaces.

Always use heat resistant oven gloves when putting dishes in or removing dishes from the hot oven.

Do not use the product if any door glass is removed or damaged.

Rear surface of the oven may get hot when it is in use. Make sure that the electrical connections do not contact the rear surface; otherwise, connections may be damaged.

Do not trap the mains cable and do not route it over hot surfaces. The cable insulation may melt and cause a fire as a result of a short circuit.

Make sure that the product function knobs are switched off after every use.

Product must be installed by a qualified person in accordance with the regulations in force. Otherwise, the guarantee may become void.

Safety for children

Electrical products can be dangerous to children. Keep children away from the product when it is operating and do not allow them to play with or near the product.

“CAUTION: accessible parts of the oven may become hot when the oven or grill is in use. Children should be kept away until the product has cooled down.”

Do not store any items above the appliance that children may reach for.

When the door is open, do not load any heavy object on it and do not allow children to sit on it. The door or door hinges may be damaged. The packaging materials will be dangerous for children. Keep the packaging materials away from children. Please dispose of all parts of the packaging according to environmental standards.

Safety when working with electricity

Any work on electrical equipment and systems should only be carried out by authorised and qualified persons.

In case of any damage, switch off the product and disconnect it from the mains. To do this, turn off the fuse at the fuse box.


Make sure that fuse rating is compatible with the product.




Do not switch the oven off at the mains isolation switch immediately after cooking. Cooling fan continues to run for up to 20-30 minutes (approx) even after the oven control is turned off.

03 - General Information

Oven layout

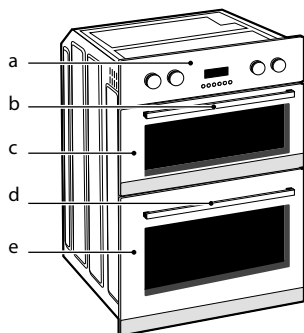


- a. Control panel
- b. Handle
- c. Top oven
- d. Handle
- e. Main Oven

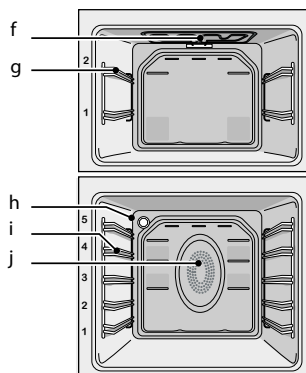

- f. Grill heating element
- g. Grill shelf supports
- h. Oven Light
- i. Oven shelf positions
- j. Fan motor (behind steel plate)

Control panel layout

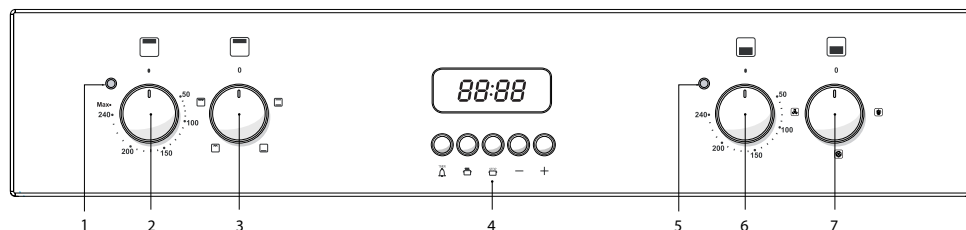


- 1. Top oven / grill temperature indicator
- 2. Main oven thermostat knob
- 3. Main oven function knob
- 4. Digital timer
- 5. Top oven / grill temperature indicator
- 6. Top oven / grill thermostat knob
- 7. Top oven / oven function knob

Accessories



 Oven tray / grill pan



Grill pan wire rack / trivet




Oven shelf

04 - Preparation

Initial use

⚠ Before using the oven the clock time must be set. If the clock time is not set, the main oven will not work.

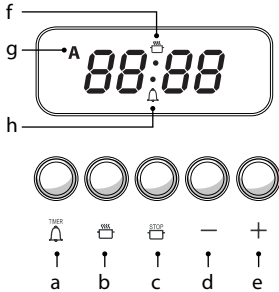

Buttons for:

- a. Alarm clock / minute minder
- b. Cooking time
- c. End of cooking time

Buttons for time adjustment:

- d. Minus button
 - e. Plus button
1. To set the time of day, press and hold buttons 'MIL' and 'STOP'
 2. Whilst continuing to hold the buttons, set the time of day by pressing the '+' or '-' button. The clock will increase or decrease in one minute increments. If you press and hold the '+' or '-' buttons for 3 seconds the time will advance quickly
 3. Once a time is set release all buttons

First cleaning of the appliance

1. Remove all packaging materials.
2. Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a clean cloth

The surface may get damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.

Initial heating

It is recommended to heat up the product for about 30 minutes and then switch it off. Thus any production residues or layers will be burnt off and removed.

1. Take the tray and the wire grid out of the oven.
2. Close the oven doors.
3. Select Fan and Grill cooking
4. Select the highest oven & grill power levels (detailed in the following pages).
5. Operate oven & grill for about 30 minutes.
6. Turn off your oven & grill and allow to cool.

⚠ Small amounts of smoke and fumes may emit during the initial heating process; this is normal, however monitor the oven at all times and ensure that the room is well ventilated.

Tips for saving energy

The following information will help you to use your appliance in an ecological way, and to save energy:

- Use dark coloured or enamel coated cookware in the oven as the heat transmission will be better.
- Perform a preheating operation if it is advised in the user manual or cooking instructions.
- Do not open the door of the oven frequently during cooking.
- Try to cook more than one dish in the oven at the same time whenever possible. You can place two cooking vessels onto the wire shelf.
- Cook one dish after another. The oven will already be hot.
- You can save energy by switching off your oven a few minutes before the end of the cooking time. Do not open the oven door.
- Defrost frozen dishes before cooking them if possible.

05 - Operating modes

Operating modes

All functions for the ovens and grill are listed in this section.

The order of operating modes shown here might deviate from the arrangement on your appliance.

Oven Light



This operates the oven internal light only. No heat will be generated, The outside cooling fan may also operate.

Fan Cooking



The element & fan (in the rear wall) are both in operation. Hot air is distributed evenly and quickly all over the cavity by the fan. In most cases, preheating is not required. This mode is suitable when several levels are used for the cooking and an even temperature is required throughout the oven cavity .

Defrost



The oven is not heated. Only the fan (in the rear wall) is in operation. Frozen granular food can be thawed slowly at room temperature, and cooked food can be cooled down.

Top and bottom heat



Top and bottom heat is used. The foodstuffs are heated simultaneously from above and below. Suitable for cakes, cookies and casseroles. For best results cook with one tray only.

Bottom heat



Only bottom heat is used. Is particularly suitable for dishes, such as pizza, which are required to be baked from beneath.

Grill-small



The inner grill element in the top oven is in operation. This is suitable for small or medium-sized portions

Ensure correct shelf position is used, set the temperature to your desired level, and turn the food as required to ensure even cooking.

Grill -Full



 
The full grill element in the top oven is in operation. This is suitable for grilling larger dishes

Ensure correct shelf position is used, set the temperature to your desired level, and turn the food as required to ensure even cooking.


06 - How to operate the main oven

How to use the main oven

As your appliance has two ovens please ensure that the appropriate function and thermostat control are selected for the oven you wish to use.



Select temperature & operating mode

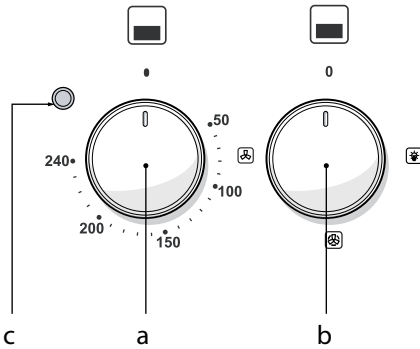

- Main oven thermostat knob
- Main oven function knob
- Temperature indicator light

The operating modes of the electric oven are selected with the function knob. The temperature is adjusted with the thermostat knob.


- Set thermostat knob to the desired temperature.
- Set function knob to the required operating mode.

The oven heats up to the selected temperature and maintains it. During heating, the temperature indicator light will remain on until the desired temperature is reached.

Shelf positions

The main oven has 5 shelf positions as illustrated below

It is important to position the wire shelf into the runners correctly.

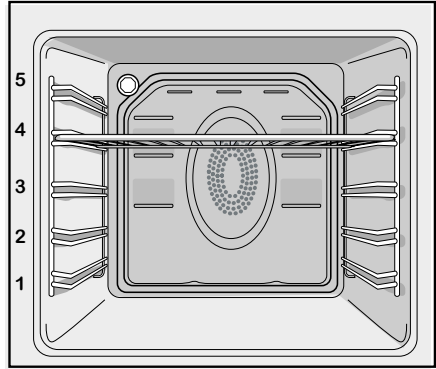

Please ensure shelves are fully inserted before closing the oven door, failure to do so could lead to damage to the door.

Warning -Do not place aluminium foil or baking trays on the base of the oven. This can lead to permanent damage to your appliance.

Warning -Do not place plates, dishes or trays on the floor of the top oven cavity when main oven is in use.

Warning - Do not use the oven or grill cavity for storage when not in use.


Switch off electric oven

Turn function knob and thermostat knob to off position (top).


07 - How to operate the top oven

How to use the Top oven

As your appliance has two ovens please ensure that the appropriate function and thermostat control are selected for the oven you wish to use.

 - Top oven / Grill

Select temperature & operating mode

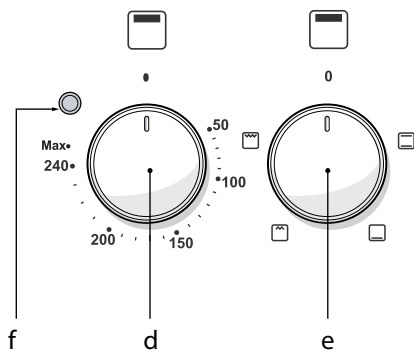


- d. Top oven thermostat knob
 - e. Top oven function knob
 - f. Temperature indicator light
1. Set thermostat knob to the desired temperature.
 2. Set function knob to the required operating mode.

The oven heats up to the selected temperature and maintains it. During heating, the temperature indicator light (f) will remain on until the desired temperature is reached.

Shelf positions

The top oven has 2 shelf positions as illustrated below

It is important to position the wire shelf into the runners correctly.

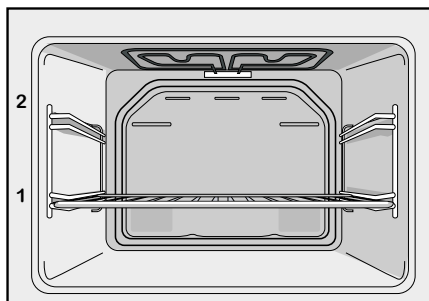

Please ensure shelves are fully inserted before closing the oven door, failure to do so could lead to damage to the door.

Warning -Do not place aluminium foil or baking trays on the base of the oven. This can lead to permanent damage to your appliance.

Warning -Do not place plates, dishes or trays on the floor of the top oven cavity when main oven is in use.

Warning - Do not use the oven or grill cavity for storage when not in use.


Switch off electric oven

Turn function knob and thermostat knob to off position (top).


08 - How to operate the Grill

How to use the grill

As your appliance is fitted with a grill please ensure that the appropriate function and thermostat control are selected for the function you wish to use.

 - Top oven / Grill

Switch on the grill

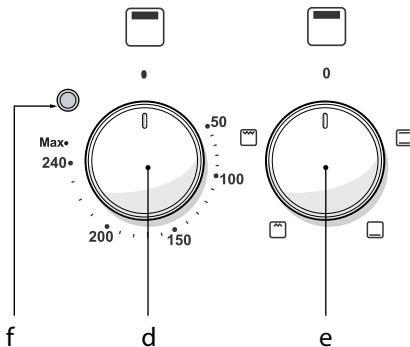

- d. Top oven thermostat knob
- e. Top oven function knob
- f. Temperature indicator light


1. Set the function knob to the half or full grill symbol.
2. Set grill temperature.
3. Preheat for approximately 5 minutes, if it is necessary.

The grill heats up to the selected temperature and maintains it. During heating, the temperature indicator light (f) will remain on until the desired temperature is reached.

⚠ Hot surfaces may cause burns! Close oven door during grilling.

Shelf positions

⚠ Do not use the upper level for grilling.

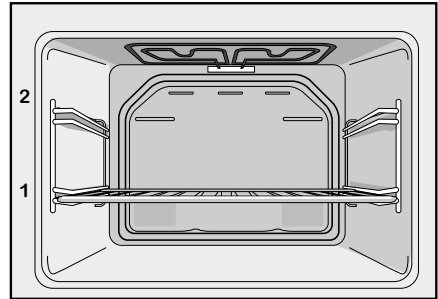

- Put large or medium-sized portions on shelf position 1 under the grill element for grilling.
- Food which requires browning only should be placed under the hot grill, either in the grill pan, or on the floor of the grill compartment, according to the depth of the dish. The grill pan wire grid can be removed.
- Only use food for grilling which is suitable for intensive grilling heat. Do not place the food too high or too far back in the grill. This is the hottest area and food may smoke, burn and even catch fire.

Warning -Do not place aluminium foil or baking trays on the base of the oven. This can lead to permanent damage to your appliance.

Warning -Do not place plates, dishes or trays on the floor of the top oven cavity when main oven is in use.


Warning - Do not use the oven or grill cavity for storage when not in use.

Switch off the grill

Turn grill control knob and thermostat knob to off position (top).

09 - How to operate the Timer

How to operate the oven timer

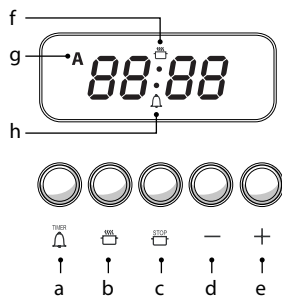

Buttons for:

- Alarm clock / minute minder
- Cooking time
- End of cooking time.

Buttons for time adjustment:

- Minus Button
- Plus Button

Display:

- Cooking available
- Automatic cooking set
- Timer set

The maximum time to be set for the end of the cooking process is 10 hours. In the case of a power cut, the program will be cancelled and reprogramming is needed.

Switch on fully automatic operation

In this mode of operation, you can define when the oven is to switch on and off automatically.

First, define the end time:

- Keep button 'STOP' pressed.
- Set the desired end of cooking time with the '+' or '-' buttons. The clock will increase or decrease in one minute increments. If you press and hold the '+' or '-' button for 3 seconds the time will advance quickly.

(The indication 'A' (auto) will light up on the display to indicate the oven has an automatic timing function configured.)

- Once desired end time is reached, release the 'STOP' button.

Next define the length of cooking time:

- Keep button 'START' pressed.
- Set the desired length of the cooking time (in hours and minutes) with the '+' or '-' buttons.
- Once the desired length of cooking time is programmed release the 'START' button.
- Put your dish into the oven.
- Select the required operating mode and temperature.

The oven will automatically switch on for the programmed length of cooking time prior to specified end time.

Once the specified end time is reached an alarm will sound, the heating of the oven will stop. (The 'START' indicator on the display will also disappear).

- To silence the alarm press the 'STOP' button
- Switch the oven off by rotating the thermostat and/or the function knob to the off position (top).
- Press both the 'START' and 'STOP' buttons simultaneously to cancel automatic mode.

The indication "A" (auto) on the display goes off.

Switch on semi-automatic operation

In this mode of operation, you can define when the oven is to switch off automatically

- Keep button 'START' pressed to define the finish time or 'STOP' to define the length of cooking.
- Set the desired time with the '+' or '-' buttons. The time will increase or decrease in

one minute increments. If you press and hold button '+' or '-' for 3 seconds the time will advance quickly.

- Once desired time is reached, release the 'STOP' or 'ALL' button.


(The indication 'A' (auto) will light up on the display.)

- Put your dish into the oven.
- Select operating mode and temperature.

The oven will heat up immediately to the set temperature and will keep this temperature until the end of the cooking time that has been defined.

Once the cooking process has been completed an alarm will sound, the heating of the oven will stop. (The 'ALL' indicator on the display will also disappear).

- To silence the alarm press the 'STOP' button
- Switch the oven off by rotating the thermostat and/or the function knob to the off position (top).
- Press both the 'ALL' and 'STOP' buttons simultaneously to cancel automatic mode.
- The indication "A" (auto) on the display goes off

 If you press the 'ALL' button during the automatic cooking process, the display will show the remaining cooking time for a short moment before reverting back to the time of day.

If you press the 'STOP' button during the automatic cooking process, the display will show the defined end time for a short moment before reverting back to the time of day.

Interrupting the cooking process

At any point the automatic cooking can be cancelled

- Switch the oven off by rotating the thermostat and/or the function knob to the off position (top).

- Press and release the 'STOP' button followed by 'ALL' and 'STOP' button simultaneously

The indication 'A' (auto) on the display goes off
Please note the cooling fan may still run for a short period of time

How to use the minute minder

In addition to using the timer for cooking, it can be also used as a minute minder.

The minute minder has no influence on the functions of the oven. As soon as the defined period of time has expired, the alarm will signal.

Setting the minute minder

- Keep button 'TIMER' pressed.
- Set the desired time with the '+' or '-' buttons. The time will increase or decrease in one minute increments. If you press and hold button '+' or '-' for 3 seconds the time will advance quickly.

The bell symbol '🔔' on the display lights up.

- Release 'TIMER' button to begin the timer.

After the defined period of time an alarm will sound

Cancelling the minute minder

- At any point the timer can be cancelled by pressing 'TIMER' and '-' buttons simultaneously

The clock will count down to 00:00.

Once the timer reaches 00:00 an alarm will sound.

- To silence the alarm press the 'STOP' button.

10 - Cooking and baking advice



Risk of scalding by hot steam! Take care when opening the oven door as steam may escape.

Tips for baking

- Use nonstick coated appropriate metal trays and containers or heat-resistant silicone moulds.
- Make best use of the space on the shelf.
- It is recommended to place the vessels in the middle of the shelf.
- Select the correct shelf position before turning the oven or grill on - don't move oven shelves when hot.
- Keep the oven door closed.

Tips for roasting

- Seasoning with lemon juice and black pepper will improve the cooking performance when cooking a whole chicken, turkey or a large piece of meat.
- Meat with bones takes about 15 to 30 minutes longer to cook than a roast of the same size without bones.
- Let meat rest in the oven for about 10 minutes after the cooking time. The juices will be better distributed throughout the meat and will not run out when the meat is cut.
- Fish in a heat proof dish should be placed at the medium or lower level.

Tips for grilling

- Grilling is ideal for cooking meat, fish and poultry and will achieve nice browning without drying out the food. Flat pieces, meat skewers and sausages are particularly suited for grilling, as are vegetables with a high water content, such as tomatoes and onions.
- Distribute the pieces to be grilled on the wire rack.
- Use tray or grill pan under the wire rack in order to collect dripping fat or juices.
- Adding some water to the grill pan will assist with cleaning.

Tips for baking cake

- If the cake is too dry, increase the temperature by 10 °C and decrease the cooking time.
- If the cake is wet, use less liquid or lower the temperature by 10 °C.
- If the cake is too dark on top, place it on a lower shelf, lower the temperature and increase the cooking time.
- If cooked well on the inside but sticky on the outside use less liquid, lower the temperature and increase the cooking time.


Tips for baking pastry


- If the pastry is too dry, increase the temperature by 10 °C and decrease the cooking time. Dampen the layers of pastry with a wash composed of milk, oil, egg.
- If the pastry takes too long to bake, pay attention that the thickness of the pastry you have prepared
- If the upper side of the pastry gets browned, but the lower part is not cooked, make sure that the amount of wash you have used for the pastry is not too much at the bottom of the pastry. Try to spread the wash equally over the pastry for an even browning.
- Cook the pastry in accordance with the mode and temperature given in the cooking table. If the bottom part is still not browned enough, place it on one lower shelf next time.














Tips for cooking vegetables

- If the vegetable dish runs out of juice and gets too dry, cook it in a dish with a lid instead of an open tray. Closed vessels will preserve the juice of the dish.
- If a vegetable dish is not cooked, boil the vegetables beforehand.

11 - Cooking Tables

 The values indicated in the tables below are indicative. They may vary according to the type of food as well as your preferences of cooking.














 **Baking and roasting**
Level 1 is the bottom level in the oven.






MAIN OVEN COOKING TABLE				
Dish	Cooking level	Oven Function	Temperature °C	Cooking Time min
Baking				
Cakes in tray*	1 Level		175	30 - 40
	2 Levels		175	45 - 50
Cakes in mould*	1 Level		175	50 - 60
	1 Level		175	25 - 35
Cakes in bun cases	2 levels		175	35 - 45
	3 levels		180	45 - 55
	1 level		200	20 - 30
Sponge cake*	1 Level		175	25 - 30
	2 levels		170 ... 190	35 - 45
	3 levels		175	30 - 40
_cookies*	1 Level		200	35 - 45
	2 levels		200	50 - 60
	3 levels		200	55 - 65
Dough pastry*	1 Level		200	25 - 35
	2 levels		200	35 - 45
	3 levels		190	45 - 55
Rich pastry*	1 Level		200	25 - 35
	2 levels		200	35 - 45
	3 levels		190	45 - 55
Meat				
Lasagna*	1 level		200	30 - 40
Roast Beef	1 level		25 min at 250/max then 180 ... 190	100 - 120
Leg of Lamb	1 level		25 min at 220 then 180 ... 190	70 - 90
Roasted chicken	1 level		25 min at 250/max then 180 ... 190	55 - 65
Turkey (5.5kg)	1 level		15 min at 250/max then 190	150 - 210
Fish				
Fish	1 level		200	20 - 30

When cooking with 2 trays at the same time, place the deeper tray on the upper rack and the other one on the lower rack.

* It is suggested to perform preheating for all foods

If cooking requires preheating, heat the oven until the thermostat lamp goes out.

TOP OVEN COOKING TABLE				
Food	Cooking level	Oven Function	Temperature °C	Cooking Time min
Cakes in tray	1 Level		175	25 - 30
Cakes in mould	1 Level		175	25 - 30
Cakes in bun cases	1 Level		175	25 - 30
Cookies	1 Level		175	25 - 30
Dough pastry	1 Level		200	35 - 40
Filled Savoury pastry	1 Level		180	25 - 35
Lasagna	1 level		180	30 - 40
Pizza	1 level		200	15 - 20
Roast Beef	1 level		25 min at 250/max then 180 ... 190	100 - 120
Leg of Lamb	1 level		25 min at 220 then 180 ... 190	70 - 90
Roasted chicken	1 level		15 min at 250 then 190	55 - 65
Turkey (5.5kg)	1 level		25 min at 250 then 190	150 - 210
Fish	1 level		200	20 - 30

GRILL COOKING TABLE			
Food	Cooking level	Oven Function	Cooking Time (min)
Fish	1 Level		20 - 25
Sliced chicken	1 Level		25 - 30
Lamb chops	1 Level		20 - 25
Steak	1 level		25 - 30
Toast	1 Level		1 - 2

Please Note: cooking times may vary depending on their thickness of food

12 - Care and maintenance

General information

Service life of the product will extend and the possibility of problems will decrease if the product is cleaned at regular intervals.


Risk of electric shock!

Switch off the electricity before cleaning appliance to avoid possibility of an electric shock.

Hot surfaces may cause burns!

Allow the appliance to cool down before you clean it.

- Clean the product thoroughly after each use. This way it will be possible to remove cooking residues more easily and will avoid burning them on the next time the appliance is used.
- No special cleaning agents are required for cleaning the product. Use warm water with washing liquid, a soft cloth or sponge to clean the product and wipe with a dry cloth.
- Always ensure any excess liquid is thoroughly wiped off after cleaning and any spillage is immediately wiped dry.
- Do not use cleaning agents that contain acid or chloride to clean the stainless steel surfaces and the handle. Use a soft cloth with a liquid detergent (not abrasive) to wipe those parts clean, paying attention to sweep in a horizontal direction.


 The surface may be damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.

Do not use steam cleaners for cleaning.

Cleaning the control panel

Clean the control panel and control knobs with a damp cloth and wipe them dry.


 **Do not** remove the control knobs for control panel cleaning.

Cleaning oven door


Don't use any harsh abrasive cleaners or sharp metal scrapers for cleaning the oven door. They could scratch the surface and damage the glass.

Removal of the oven door

1. Open the door.
2. Unlock the clips at the hinge housing on the right and left hand sides of the door by pressing them down as illustrated in the diagram.

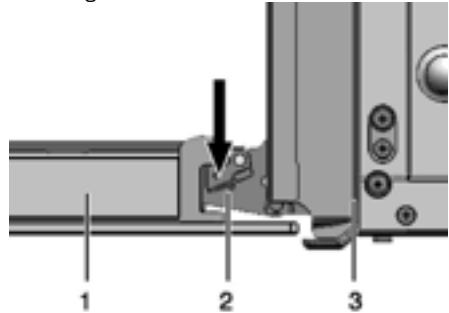


1. Door door
2. Hinge
3. Oven

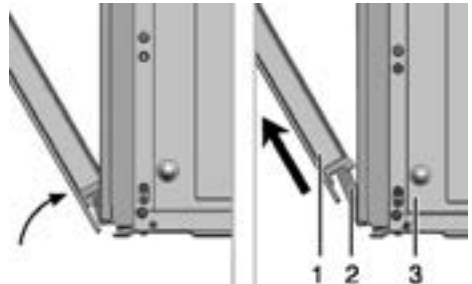

4. Raise the door to the half-way position.
5. Remove the door by pulling it upwards to slide it from the hinges.

Steps carried out during removing process should be performed in reverse order to reattach the door.

 Do not forget to close the clips at the hinge housing when reinstalling the door.

Replacing the oven lamp

⚠ Hot surfaces may cause burns!

Make sure that the appliance is switched off and cooled down in order to avoid the risk of an electrical shock or burns.

i The oven lamp is a special electric lamp that can resist up to 300°C. See Technical specifications, for details.

i Position of lamp might vary from the diagram.



1. Disconnect the product from mains.
2. Turn the glass cover counter clockwise to remove it.
3. Remove the oven lamp by turning it counter clockwise and replace it with the new one.
4. Install the glass cover

13 - Installation

Before installation


The product should only be installed by suitably qualified persons.


Material damage!


The door and/or handle must not be used for lifting or moving the appliance.

- We recommend 2 people handling of the product.

Use the handle slots located at both sides of the oven to move the appliance.


 The product must be installed in accordance with all local regulations.

 Prior to installation, visually check the product for any damage/defects. Do not install if any issues are found. Damaged products may cause risks to your own safety.

 **We recommend 50mm worktops to be used if the oven is to be installed in conjunction with a Lamona induction hob.**

The appliance is intended for installation in Howdens kitchen cabinets.

- Surfaces, synthetic laminates and adhesives used must be heat resistant.
- Kitchen cabinets must be set level and fixed.
- The following installation drawings are representational and may not match exactly with your appliance.

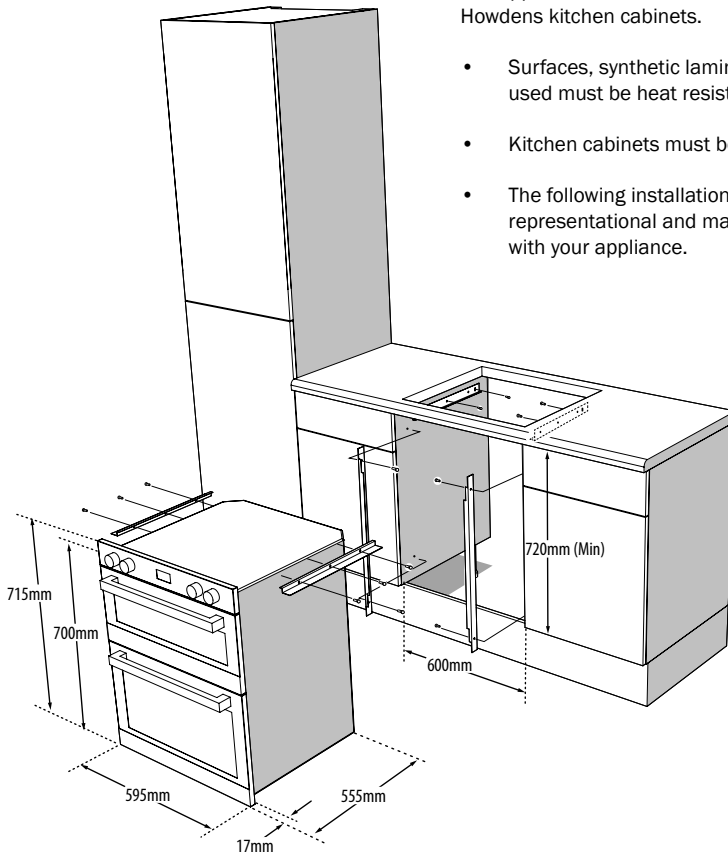



Installation and connection

1. The Oven is designed to fit within a 720 x 600 aperture with a minimum depth of 575mm
2. Align the two brackets 'B' with the top edge of the of the cabinety with the screws provided (as illustrated below) , set the leading edge of each bracket 50mm from the front edge of the furniture.
3. Following this fit the two runners 'A' to each side of the oven housing
4. Brackets 'C' should be positioned vertically 17mm back from front edge of the cabinete frontals

Note the vertiacl brackets 'C' only have the cabinete side pre drilled. For greater stability the brackets 'C' can be drilled and secured from the front once the oven is in possition.

Slide the oven through the cabinet aperture, align and secure.

Fix your oven with the 2 screws and washers as indicated in the illustration.

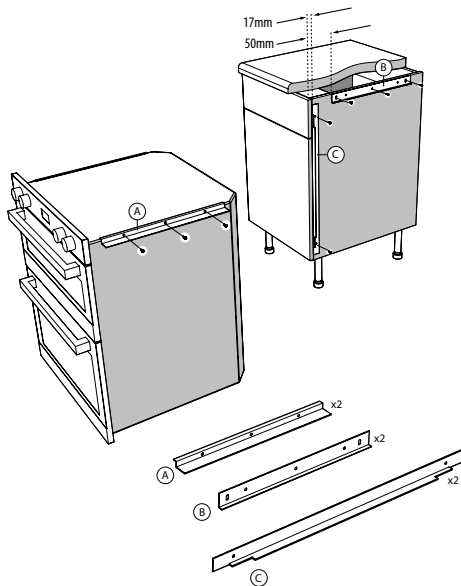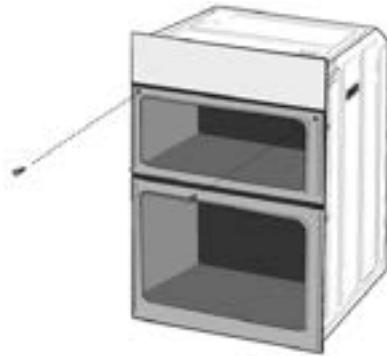

Final check

Connect the appliance to the mains supply, switch on the mains supply and check the oven's functions,

⚠ The clock time must be set in order for the functions to work. Refer to initial use section for further info.

Connection to the mains supply

⚠ This appliance must be earthed!

Howdens shall not be held responsible for any damage caused by using the appliance without an earthed connection.

⚠ Risk of electric shock, short circuit or fire by unprofessional installation!

The mains lead must not be clamped, bent, trapped or come into contact with hot parts of the appliance. If the mains lead is damaged, it must be replaced by a qualified person.

- The mains supply must correspond to the data specified on the rating plate of the appliance. The rating plate can be seen when the main oven door is opened.
- The appliance mains cable must correspond to the specifications and the power consumption; see Technical specifications, page.


⚠ Risk of electric shock. Before starting any work on the electrical installation, please disconnect the mains supply.

1. This appliance must only be installed by a qualified electrician, e.g. a local electricity company or a NICEIC registered contractor, to a suitable double-pole control unit with a minimum contact clearance of 3 mm in all poles. the work should be carried out in accordance with IEE regulations. Failure to observe this instruction may result in operational problems and invalidation of the appliance Guarantee.


Additional protection by a residual current circuit breaker is recommended.

2. Open the terminal block cover with screwdriver.
3. Pass the mains lead through the cable clamp under the terminal and fix the mains lead to main body with supplied screw via cable grip.
4. Connect the cables according to the supplied diagram

5. Close the cover of the terminal block once the wiring is complete. Mains cable must not be longer than 2 metres for safety reasons.
6. The mains lead should be routed away from the appliance and not be trapped between the appliance and the wall.

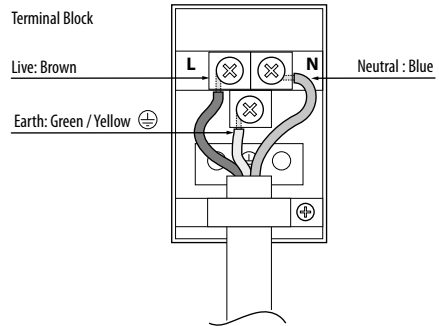

Cooling fan

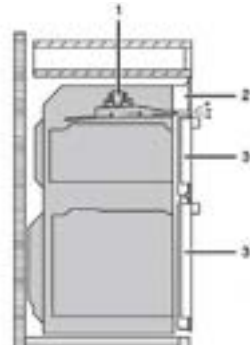

- | | |
|---|---------------|
| 1 | Fan |
| 2 | Control panel |
| 3 | Door |

The Built-in cooling fan cools both the front of the appliance and cabinetry.

⚠ Do not switch the oven off at the mains isolation switch immediately after cooking. Cooling fan continues to run for up to 20-30 minutes (approx) even after the oven control is turned off.

14 - Technical specification

TECHNICAL INFORMATION

General

Voltage /Frequency	220-240 V ~ 50 Hz
Total power consumption	4,6kW
Fuse	min. 25 A
Cable type / section	H05VV-FG 4.0 mm ² , 3 core or equivalent
Cable length	max. 2 m

Oven/Grill

External dimensions (height / width / depth)	715 mm/596 mm/560mm
Installation dimensions (height / width / depth)	710 mm/600 mm/min. 600 mm

Main oven

Energy efficiency class#	A
Inner lamp	240 V/15-25 W/E14 SES/T 300 °C

Fan Oven

Top oven

Energy efficiency class#	B
Power consumption	2.5 kW
Innner lamp	240 V/15-25 W/E14 SES/T 300 °C

Conventional oven/Grill

Basics: Information on the energy label of electrical ovens is given in accordance with the EN 50304 standard. Those values are determined under standard load with bottom-top heater or fan assisted heating (if any) functions.

Energy efficiency class is determined in accordance with the following prioritization depending on whether the relevant functions exist on the product or not. 1-Cooking with eco-fan, 2- Turbo slow cooking, 3- Turbo cooking, 4- Fan assisted bottom/top heating, 5-Top and bottom heating.

** See. Installation section.

- Technical specifications may be changed without prior notice to improve the quality of the product.
- Figures in this manual are schematic and may not exactly match your product.
- Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

15 - Troubleshooting

TROUBLESHOOTING GUIDE

Symptoms	Possible Cause	Solutions
Oven emits steam when it is in use.	<ul style="list-style-type: none"> Food is being cooked with a high water content 	It is normal that steam escapes from food during cooking. This is not a fault.
Product emits metal noises while heating and cooling.	<ul style="list-style-type: none"> When the oven cavity heats up or cools down parts will expand and contract. 	This is quite normal and the oven is designed to accommodate such movement (this is not a fault).
Product does not operate	<ul style="list-style-type: none"> The mains fuse maybe defective or has tripped Product is not connected properly. 	<p>Check fuses in the fuse box. If necessary, replace or reset them.</p> <p>Check all power connections.</p>
Oven light does not work.	<ul style="list-style-type: none"> Oven bulb is defective Power is cut. 	<p>Replace oven bulb</p> <p>Check if there is power. Check the fuses in the fuse box. If necessary, replace or reset the fuses.</p>
Oven does not heat.	<ul style="list-style-type: none"> Function and/or Temperature are not set. The timer is not adjusted correctly Power is cut. 	<p>Set the function and the temperature with the Function and/or Temperature knob/key.</p> <p>Reset the oven timer.</p> <p>Check if there is power. Check the fuses in the fuse box. If necessary, replace or reset the fuses.</p>



If you cannot eliminate the problem after following the instructions in this section, consult your depot or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

16 - Your guarantee

Product Guarantee Details (UK only)

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee (MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE)
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alternations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person.

(The guarantee in no way affects your statutory or legal rights)

What to do if you need to report a problem-

Please ensure you have ready:

- **The product's model & serial numbers**
- **Howdens Proof of Purchase document**
- **Your full contact details**



Call the Service Line on 0845 00 60 006



If supplied, please stick your self adhesive product rating plate here, or make a note of the product serial number below in the box below for future reference.

Serial Number :



HOWDENS JOINERY CO.

MAKING SPACE MORE VALUABLE



This brochure is printed on FSC certified paper
